

## CAN I DRIVE THE BUS?

### DO NOT DRIVE THE BUS IF:

Alternator Belt (loose or frayed)  
Ambers/Reds  
Back Up Alarm  
Brake Drum (cracked)  
Brake lights  
Brake Line (leaking)  
Brakes (spongy)  
Coolant  
Drive Shaft (bent)  
Frame (bent)  
Gas Leaks  
Gas Tank (loose)  
Guages (over heating)  
Hazards  
Headlights  
Horn  
Hub Oil Seal (leaking)  
Lug Nuts  
Oil  
Oil Pressure (not rising)  
Parking Brake  
Power Steering  
Reverse lights  
Rims (bent or cracked)  
Safety Equipment (secured, stocked)  
Seatbelts/Harnesses  
Steering Wheel (loose)  
Suspension (cracked, loose or broke)  
Taillights  
Tires (flat or debris)  
Turn Signals  
Water Pump

### CAN STILL DRIVE IF:

Ammeter (not charging)  
Clearance Lights  
Cracked Windshield (out of drivers view)  
Dome Lights  
Entry Tread  
Exhaust System (small hole)  
Hand Rail  
Heater/Defroster  
Lenses (cracked)  
Lug Nut Covers  
Parking Lights  
Passenger Entry  
Reflectors  
Seat Cover Torn  
Small Leaks  
Small Tail Lights  
Strobe Light  
Tire Stem Cap (missing)  
Windshield Wipers (unless needed)

